




## REMOTE CONTROL


### Remote Control Operation

 
Remote control will hold program setup for 15 minutes without batteries to allow you to change batteries without reprogramming remote. If remote loses its program for any reason use the following instructions.


1. Hold down the set button until the red LED blinks twice, then release the button.
2. Enter **0000**

 
**Wash Down:** Press red power button . Display will show **0000**. Enter your four digit access Code (Default is 1 2 3 4). Timer will show **OK** if code is correct.

 
Press red power button  on remote control. Timer will display **M0:00** and start counting up. Timer will continue to run until washdown cycle length is reached or washdown cycle is stopped by operator. Note: To stop washdown cycle press red power button .

 
**Inventory:** Press red power button . Display will show 0000. Enter your four digit access code (Default is 1 2 3 4).


Timer will show **OK** if code is correct. Press  on remote control.

Timer will show **COINS 0000 AUX 0000 MANUAL 0000**. Press  again to return to standby message. Coins represents coins deposited. Manual represents the number of washdown cycles.

 
 
To clear inventory: With inventory showing, press and hold  until


 

**CLR?** appears on timer. Press and hold  again until **DONE** appears on timer. Inventory has now been reset to zero. Clearing inventory resets both coins and manual to zero.

Press  to return to standby.

 
 
 
**Timer Programming:** Press red power button . Timer will show **0000**. Enter four digit access code (Default is 1 2 3 4).

Timer will show **OK** if code is correct.

Press . Timer will display **COIN VALU \$ .25**. Use  or  to set monetary value of one coin pulse.

Press  to advance to next item. Use  or  to set value or make choice for that item.

Continue in this manner until all modes have been programmed .

Use  to move to the next mode. Use  or  to set required value .

Remote control access will automatically become disabled when no buttons have been pushed for approximately one minute.