


GOLDLINE ACW DISPLAY RETROFIT

PREPARATION


Remove power from machine and unplug display.

Remove display assembly from door.

Remove 2 small screws to open display case.

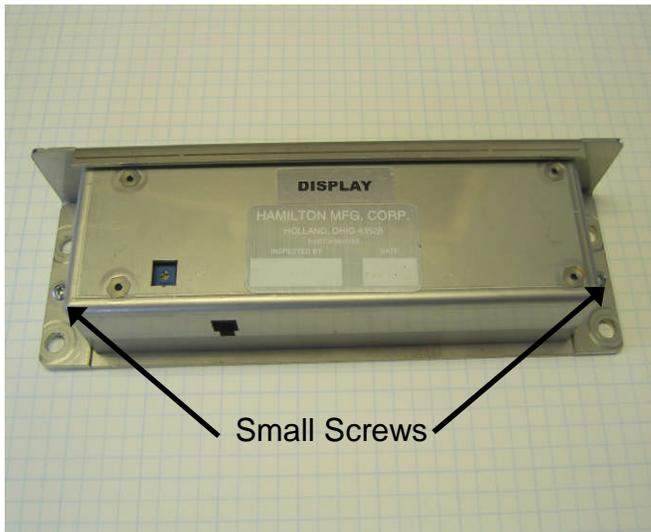

Remove screw and washer at each corner of display (4 places).

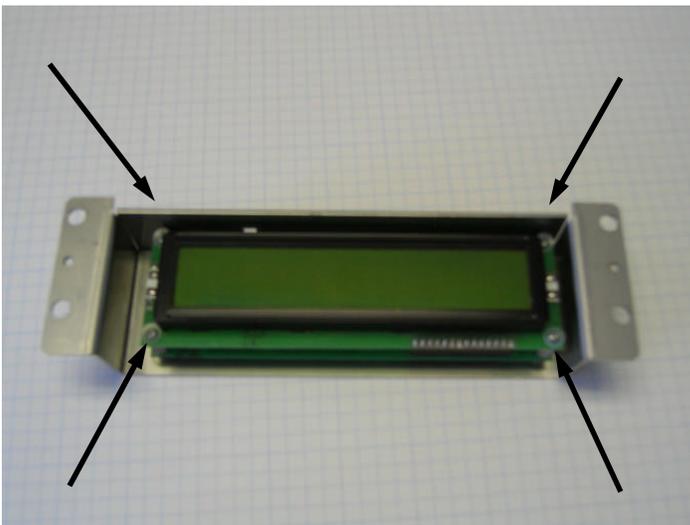

Carefully lift and separate two circuit boards.

Remove top circuit board.



Remove hex spacers and second circuit board then replace spacers in metal pan.



INSTALLATION OF NEW DISPLAY


If you have not already done so, remove three wires from the green terminal block on the new display using a very small screw driver.

Note the wire positions as they will have to be reconnected in the same order.

- 1 - Red
- 2 - Green
- 3 - Black


Install rubber grommet into bottom of metal pan as shown.

Feed wires through grommet and reconnect to green terminal block as shown.

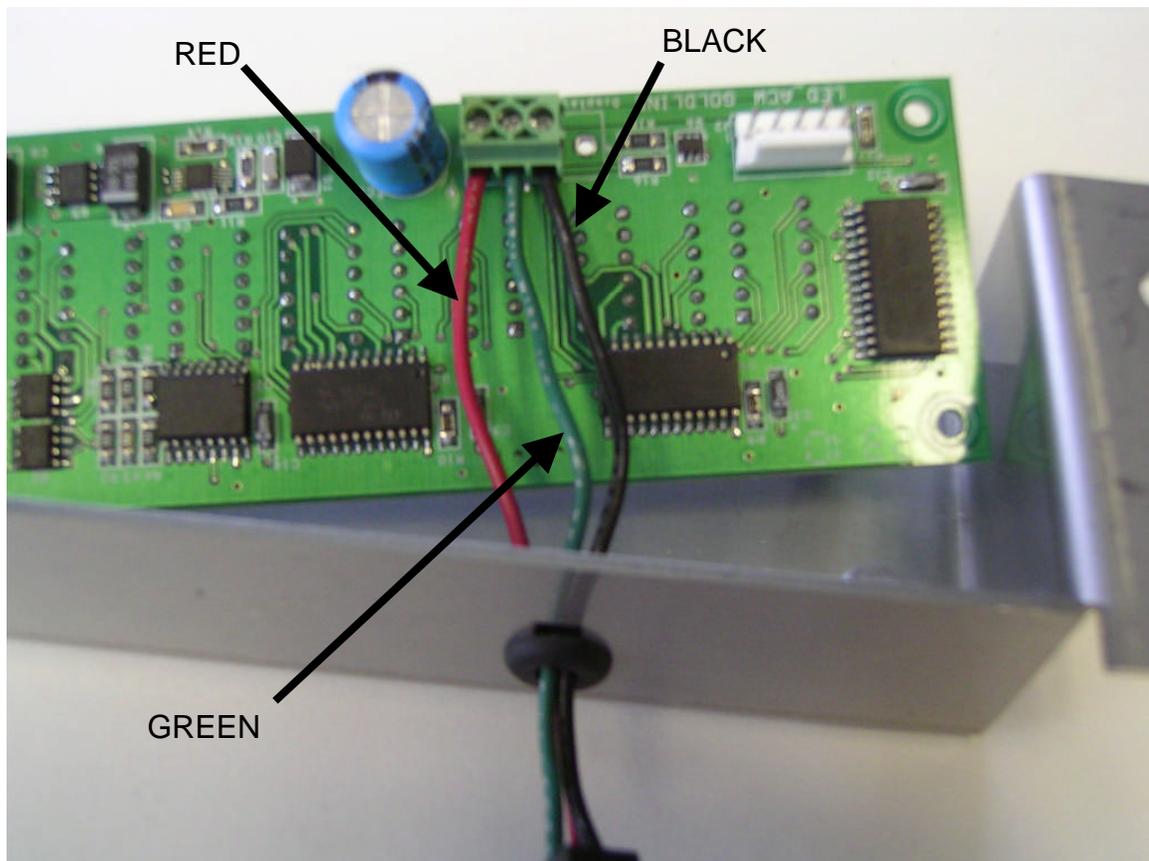


Turn board over and install on metal spacers as shown.

Note: when installed in pan, green terminal block will be on same side of the metal pan as the rubber grommet.
Failure to do so will result in display being upside down.

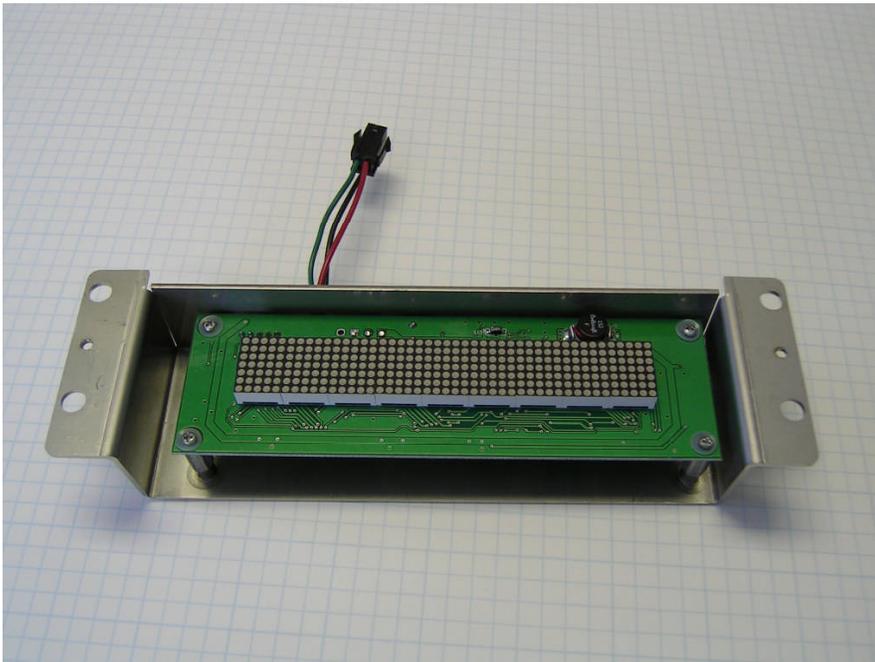

Remove paper and install red plastic filter, then reassemble stainless case.

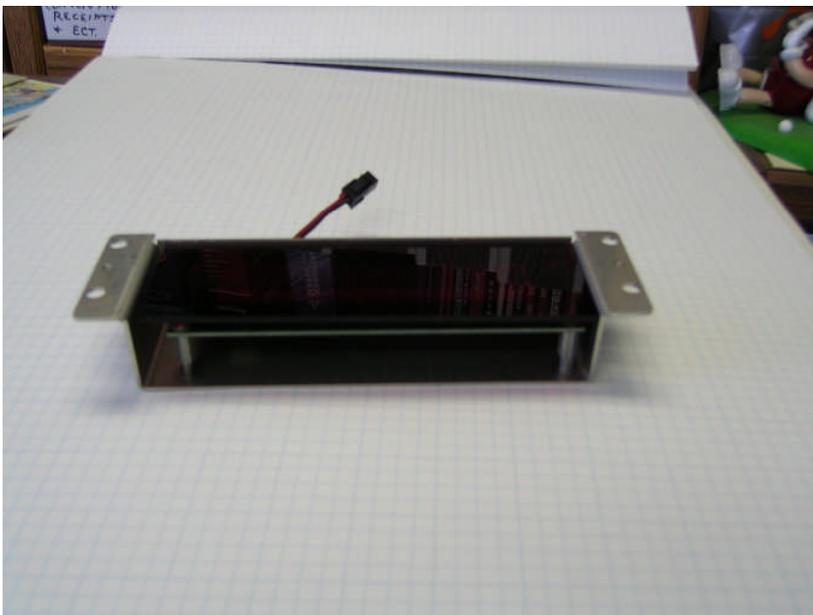

Reinstall case on door of ACW.
Plug in.
Restore power to machine.



DIXMOR ENTERPRISES
5755 S GALLUP ST
LITTLETON, CO 80120
303-794-0597 303-794-1387
888-234-9667